VARIOUS INK REFILLING TIPS

Match the color number of your marker with the color number on the Various Ink cap. This applies to all marker types.

DRIP METHOD

This method applies to all marker types.

- 1. Uncap both ends of the marker.
- 2. Hold the marker in one hand, at an angle, with the flat side of the Broad or Medium Broad Nib up.
- 3. With your other hand, gently drip Various Inkdrops onto the nib surface, allowing each drop to be absorbed before adding the next.

NOTES: If overfilling occurs, use a tissue to absorb the extra ink. Use rubbing alcohol to clean any ink spills and to wipe your marker clean.

COPIC: USING THE BOOSTER

- 1. Screw the Booster needle onto your various ink bottle. Carefully remove the protective cap from the Booster.
- 2. Carefully insert the Booster along the side of the nib.
- 3. Add 2-3 cc of ink (depending on how empty your marker is). The back of the Various Ink bottle has measurements on it. Replace the marker cap when done.



Refilling Wide Markers

45° angle, then drip Various Ink onto the nib, resting the ink nozzle in provided notch. Holds up to 5cc's.

SKETCH & CIAO: USING THE BOOSTER

- 1. Screw the Booster needle onto your Various Ink bottle. Carefully remove the protective cap.
- 2. Remove the Booster from the Medium Broad nib and insert the Booster into the marker body.
- 3. Add 2-3cc of ink (depending on how empty your marker is). The back of the Various Ink bottle has measurements on it. Replace the nib and marker cap when done.

COPIC Booster Warnings!



- · Booster is sharp!
- · Always recap Various Ink after use.
- · Not intended for children.
- · Clean Booster with rubbing alcohol after each use.

For questions or comments contact us at Imagination International, Inc. Copic Markers (541) 684-0013, or at **copicmarker.com**Copyright © 2014 Imagination International, Inc. All Rights Reserved

